



PRODUCT USAGE AND INSTRUCTIONS

+ Halex™ (Non-Insulated)

INSTRUCTIONS FOR USE:

- LID DISASSEMBLES FOR CLEANING RIGHT. ALL PARTS ARE TOP-RACK DISHWASHER SAFE.
- USE A STRAW BRUSH FOR A MORE THOROUGH CLEANING. FOR BEST CLEANING RESULTS, USE A BLENDERBOTTLE® BRAND BOTTLE BRUSH.
- DO NOT MICROWAVE, FREEZE, OR BOIL.
- NOT FOR USE WITH HOT, CARBONATED, OR PERISHABLE LIQUIDS.
- PRESSURE CAN CAUSE YOUR DRINK TO SPURT FROM THE SPOUT UPON OPENING UNLESS YOU FIRST RELEASE THE PRESSURE. PRESSURE CAN BE RELEASED BY LOOSENING THE LID BY A QUARTER TURN. RE-TIGHTEN THE LID BEFORE USING. ALTITUDE CHANGES (SUCH AS DURING TRAVEL BY AIRPLANE OR UP MOUNTAINS) OR EXPOSURE TO HOT TEMPERATURES (SUCH AS LEAVING THE BOTTLE IN A CAR) CAN BUILD PRESSURE IN THE BOTTLE.

WARNINGS:

- NOT FOR USE BY CHILDREN UNDER 3 YEARS OF AGE.
- HOT, CARBONATED, AND PERISHABLE LIQUIDS AND OTHER CONTENTS MAY BUILD UP PRESSURE WITHIN THE BOTTLE AND UNEXPECTEDLY LEAK OR SPRAY OUT.

HOW TO DISASSEMBLE LID:

- TO REMOVE SELECTOR, TURN IT TO POINT TO THE BLENDERBOTTLE BALL ICON (SEE DIAGRAM BELOW) THE PULL UP ON THE SPOUT.
- PULL UP ON THE CLEAR SILICONE GASKET TO REMOVE IT.

