



PRODUCT USAGE AND INSTRUCTIONS

+ SportMixer®

INSTRUCTIONS FOR USE:

- ALL PARTS ARE TOP-RACK DISHWASHER SAFE.
- RINSE WITH WARM WATER IMMEDIATELY AFTER EACH USE.
- DO NOT MICROWAVE, FREEZE, OR BOIL.
- NOT FOR USE WITH HOT LIQUIDS.

WARNINGS:

- NOT FOR USE WITH HOT LIQUIDS.
- HOT OR WARM LIQUIDS (OR OTHER INGREDIENTS SUCH AS PANCAKE BATTER, SODA, ETC.) MAY BUILD UP PRESSURE WITHIN BOTTLE, CAUSING BOTTLE TO OPEN UNEXPECTEDLY AND SPRAY CONTENTS. OPEN BOTTLE WITH CAUTION.